



# RFD900x Peer-to-peer V3.X Firmware

## User Manual

Configuration and usage guide  
Flash Programmer User Manual

RFDesign Pty Ltd  
7/1 Stockwell Place  
Archerfield, QLD 4108  
rfdesign.com.au

## Table of contents

---

1	Introduction.....	3
2	Software/GCS Support .....	4
3	AT commands.....	5
3.1	Setting up data encryption .....	9
3.2	Setting the air data rate .....	10
3.3	Setting up PPM.....	10
4	Region Certified Modems .....	14
5	Peer-to-peer Network .....	15
6	Certifications.....	16
7	Frequently asked questions (FAQ) .....	17
7.1	How many antennas do I need to use? .....	17
7.2	How do I connect the FTDI cable to the modem?.....	17
7.3	What do I need to upload the firmware or to change the modem configuration? .....	17
8	Useful links .....	18
9	Document revision history .....	19

# 1 Introduction

---

The RFD900x radio modem can be loaded with three official firmware releases to achieve different communication architectures and node topologies. So far, the available firmware versions are:

- Peer-to-peer (P2P) (SiK)
- Asynchronous mesh
- Multipoint network

This document describes the configuration of the peer-to-peer releases V3 and up. RFD900x sold after April 2019 come with this version loaded by default, and it requires no further configuration to work. Figure 1-1 pictures a P2P network diagram.

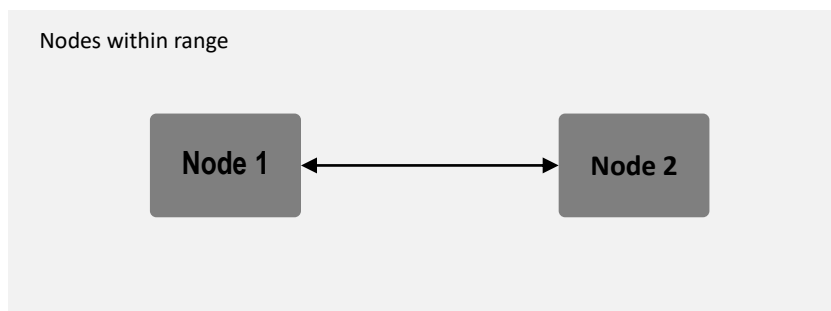


Figure 1-1: Peer-to-peer network architecture

## 2 Software/GCS Support

---

This firmware is a development of the open source project called “SiK” that was created by Mike Smith and further developed and modified by Andrew Tridgell and RFDesign.

The modems feature a boot loader to facilitate field upgrade of the modem firmware via the serial port. This is most easily performed by using the latest version RFD Modem tools (see “Useful links”)

Parameters such as power levels, air data rates, serial speeds, GPIO pins etc can all be custom set by using the AT Command set, the RFD Modem Tools and APM Planner.

Default serial port settings are as follows:

- 57600 baud rate
- No parity
- 8 data bits
- 1 stop bit

The RFD900x Radio Modem has many software features including:

- Frequency Hopping Spread Spectrum
- Transparent Serial Link
- Configuration by AT commands for local radio, RT commands for remote radio
- User configurable serial data rates and air data rates
- Error correction routines
- 128-bit AES hardware encryption with user settable key
- MAVLink protocol framing (user selectable)
- MAVLink radio status reporting (Local RSSI, Remote RSSI, Local Noise, Remote Noise)
- Automatic antenna diversity switching on a packet basis in real-time
- Automatic duty cycle throttling based on radio temperature to avoid overheating
- PPM (R/C signal) pass through (Control vehicle across radio).
- GPIO pin mirroring

### 3 AT commands

The RFD900x modem can support an AT modem command set for configuration. The AT command mode can be entered by using the '+++' sequence in a serial terminal connected to the radio. You should allow at least one second after the sending of data before entering the sequence to ensure that the modem will correctly enter command mode.

If successful, an 'OK' prompt will be displayed on the screen and the RFD900x modem will stop displaying incoming data from the remote modem. In command mode, you can use the AT commands to control the local RFD900x modem or the RT commands to control the remote modem.

To set certain registers to a value, follow these steps:

1. Use the command `ATSn=X` where  $n$  is the register number and  $X$  is the value to assign.
2. Use the command `AT&W` to save the new values to the RFD900x modem.
3. Use the command `ATZ` to reboot the RFD900x modem for changes to take effect.

By replacing `A` with `R` the settings of the remote modem can be changed. It is recommended that changes to remote settings be made first.

Table 3-1 shows a list of AT commands and their description.

AT Command	Description
<code>ATI</code>	Shows the firmware version and country code
<code>ATI2</code>	Shows the board type
<code>ATI3</code>	Shows board frequency
<code>ATI4</code>	Shows board version
<code>ATI5</code>	Shows all user settable EEPROM parameters and their values
<code>ATI5?</code>	Shows all user settable EEPROM parameters and their possible range
<code>ATI6</code>	Displays TDM timing report
<code>ATI7</code>	Displays RSSI signal report
<code>ATI8</code>	Display Device 64-bit unique ID
<code>ATI9</code>	Display node ID [multipoint only]
<code>ATO</code>	Exits AT command mode
<code>ATSn?</code>	Displays radio 'S' parameter number 'n'
<code>ATSn=X</code>	Sets radio 'S' parameter number 'n' to 'X'
<code>ATRn?</code>	Displays radio 'R' parameter number 'n'
<code>ATRn=X</code>	Sets radio 'R' parameter number 'n' to 'X'
<code>ATZ</code>	Reboots the radio
<code>AT&amp;F</code>	Resets all parameters to factory defaults
<code>AT&amp;W</code>	Writes current parameters to EEPROM
<code>AT&amp;UPDATE</code>	Reset and enter boot mode
<code>AT&amp;P</code>	Change TDM phase (debug only)
<code>AT&amp;R</code>	Record default PPM stream for PPM output (vehicle side)
<code>AT&amp;T</code>	Disables debugging report
<code>AT&amp;T=RSSI</code>	Enables RSSI debugging report

<b>AT&amp;T=TDM</b>	Enables TDM debugging report
<b>AT&amp;E=X</b>	Set new encryption key (128-bit AES in 32 hex characters e.g. 5A02D5BB...)
<b>AT&amp;E?</b>	Shows current encryption key
<b>ATPP</b>	Shows GPIO configuration and state
<b>ATPO=X</b>	Sets GPIO X to output
<b>ATPI=X</b>	Sets GPIO X to input
<b>ATPM=X</b>	Sets input GPIO pin to mirror on remote radio (local GPIO must be set to input and remote GPIO pin must be set to output)
<b>ATPR=X</b>	Shows GPIO input state
<b>ATPC=X,S</b>	Sets output GPIO X to state S

Table 3-1: AT Commands and their description

An example that command will return the local modem's firmware version string.

```

ATI
Response
RFD SiK 3.07 on RFD900X R1.3-AU    # On a region locked modem
RFD SiK 3.07 on RFD900X R1.3      # On an unlocked modem

```

Note the letters after the -, AU in the above example, designate the region of the modem. AU Australia, NZ New Zealand, USA United States of America (also applies to Canada). No -XX format in the response string indicates that the modem is not region locked.

Issuing a AT command will take affect only in the local node. Parameters can be written to the memory using the AT&W command. Note: Some parameters require a reset, ATZ, before the changes will take effect even this will also require that the changes have been written, with AT&W, so that they persist after the reset.

RT commands are terminal commands that take effect on a remote node. They allow the user to set or get a remote node's parameter, for instance, as if they were being set locally. Table 3-2 lists the RT commands and their respective descriptions.

RT Command	Description
<b>RT1</b>	Shows the radio version
<b>RTI2</b>	Shows the board type
<b>RTI3</b>	Shows board frequency
<b>RTI4</b>	Shows board version
<b>RTI5</b>	Shows all user settable EEPROM parameters and their values
<b>RTI5?</b>	Shows all user settable EEPROM parameters and their possible range
<b>RTI6</b>	Displays TDM timing report
<b>RTI7</b>	Displays RSSI signal report
<b>RTI8</b>	Display Device 64-bit unique ID
<b>RTI9</b>	Display node ID [multipoint only]

<b>RT0</b>	Exits AT command mode
<b>RTSn?</b>	Displays radio 'S' parameter number 'n'
<b>RTSn=X</b>	Sets radio 'S' parameter number 'n' to 'X'
<b>RTRn?</b>	Displays radio 'R' parameter number 'n'
<b>RTRn=X</b>	Sets radio 'R' parameter number 'n' to 'X'
<b>RTZ</b>	Reboots the radio
<b>RT&amp;F</b>	Resets all parameters to factory defaults
<b>RT&amp;W</b>	Writes current parameters to EEPROM
<b>RT&amp;UPDATE</b>	Reset and enter boot mode
<b>RT&amp;P</b>	Change TDM phase (debug only)
<b>RT&amp;R</b>	Record default PPM stream for PPM output (vehicle side)
<b>RT&amp;T</b>	Disables debugging report
<b>RT&amp;T=RSSI</b>	Enables RSSI debugging report
<b>RT&amp;T=TDM</b>	Enables TDM debugging report
<b>RT&amp;E=X</b>	Set new encryption key (128-bit AES in 16 hex bytes e.g. 5A02D5BB...)
<b>RT&amp;E?</b>	Shows current encryption key
<b>RTPP</b>	Shows GPIO configuration and state
<b>RTPO=X</b>	Sets GPIO X to output
<b>RTPI=X</b>	Sets GPIO X to input
<b>RTPM=X</b>	Sets input GPIO pin to mirror on remote radio (local GPIO must be set to input and remote GPIO pin must be set to output)
<b>RTPR=X</b>	Shows GPIO input state
<b>RTPC=X,S</b>	Sets output GPIO X to state S

Figure 3-2: RT Commands and their description

Issuing a RT command will take affect only in the remote node. A reset RTZ may be required before the changes will take effect even after a writing the parameters with RT&W. Depending on the parameters changed link may be lost due to mismatch until local settings match the remote node.

Table 3-3 detailing the S-register parameters settings on the RFD x series modem.

Reg #	S Register Description	Default Value	Maximum Value	Minimum Value	Must be the same at both ends of the link?
<b>S0</b>	<b>FORMAT</b> This is for EEPROM version, it should not be changed. It is set by the firmware	Firmware dependant	N/A	N/A	No
<b>S1</b>	<b>SERIAL_SPEED</b> Serial speed in 'one-byte form'. Accepted values are 1, 2, 4, 9, 19, 38, 57, 115, 230, 460 and 1000 corresponding to 1200bps, 2400bps, 4800bps, 9600bps, 19200bps, 38400bps, 57600bps, 115200bps, 230400bps, 460800bps and 1000000bps respectively.	57	1000	1	No
<b>S2</b>	<b>AIR_SPEED<sup>1</sup></b> Air data rate in 'one-byte form'. Accepted values are 12, 56, 64, 100, 125, 200, 224, 500 and 750 corresponding to 12000bps,	64	750	12	Yes

	56000bps 64000bps, 100000bps, 125000bps, 200000bps, 250000bps, 224000bps, 500000bps and 750000bps respectively.				
<b>S3</b>	<b>NETID</b> Network ID. The same on both modems in the pair	25	255	0	Yes
<b>S4</b>	<b>TXPOWER<sup>1</sup></b> Transmit power in dBm. Maximum is 30dBm	30	30	0	No
<b>S5</b>	<b>ECC<sup>2</sup></b> Enables or disables the Golay error correcting code. When enabled, it doubles the over-the-air data usage	0	1	0	Yes
<b>S6</b>	<b>MAVLINK<sup>3</sup></b> Enables or disables the MAVLink framing and reporting	1	1	0	No
<b>S7</b>	<b>OPPRESEND</b> Opportunistic resend allows the node to resend packets if it has spare bandwidth	0	1	0	No
<b>S8</b>	<b>MIN_FREQ<sup>1</sup></b> Min frequency in KHz	915000 /868000 <sup>4</sup>	927000 /869000 <sup>4</sup>	902000 /868000 <sup>4</sup>	Yes
<b>S9</b>	<b>MAX_FREQ<sup>1</sup></b> Max frequency in KHz	928000 /869000 <sup>4</sup>	928000 /870000 <sup>4</sup>	903000 /869000 <sup>4</sup>	Yes
<b>S10</b>	<b>NUM_CHANNELS<sup>1</sup></b> Number of frequency hopping channels	20	50	1	Yes
<b>S11</b>	<b>DUTY_CYCLE<sup>1</sup></b> The percentage of time to allow transmit	100	100	10	No
<b>S12</b>	<b>LBT_RSSI<sup>1</sup></b> Listen before talk threshold (This parameter shouldn't be changed)	0	220	25	Yes
<b>S13</b>	<b>RTSCTS</b> Ready-to-send and Clear-to-send flow control.	0	1	0	No
<b>S14</b>	<b>MAX_WINDOW</b> Max transit window size used to limit max time/latency if required otherwise will be set automatically	131	400	20	Yes
<b>S15</b>	<b>ENCRYPTION_LEVEL</b> Encryption level 0=off, 1=128bit AES	0	1	0	Yes
<b>S16</b>	<b>GPI1_1R/CIN</b> Set GPIO 1.1 (pin 15) as R/C(PPM) input	0	1	0	No
<b>S17</b>	<b>GPO1_1R/COU</b> Set GPIO 1.1 (pin 15) as R/C(PPM) output	0	1	0	No
<b>S18</b>	<b>GPO1_1SBUSIN<sup>5</sup></b> Set GPIO 1.1 (pin 12) as SBUS input	0	1	0	No
<b>S19</b>	<b>GPO1_1SBUSOUT<sup>5</sup></b> Set GPIO 1.1 (pin 12) as SBUS output	0	4	0	No
<b>S20</b>	<b>ANT_MODE</b> 0= Diversity, 1= Antenna 1 only, 2= Antenna 2 only, 3= Antenna 1 TX and antenna 2 RX	0	3	0	No
<b>S21</b>	<b>GPO1_3STATLED</b>	0	1	0	No



	Set GPIO 1.1 (pin 12) as output with state that mirrors the status LED on the modem				
<b>S22</b>	<b>GPO1_0TXEN485<sup>6</sup></b> Set GPIO 1.0 (pin 13) as control signal on DINIO and RS485 interface boards.	0	1	0	No
<b>S23</b>	<b>RATE/FREQBAND</b> Changes the frequencies bands and airspeeds within set ranges on compliant modems ensuring compliance is maintained	0	3	0	Yes
<b>R0</b>	<b>TARGET_RSSI</b> Optimal RSSI value to try to sustain (255 disables the feature)	255	50	255	No
<b>R1</b>	<b>HYSTERESIS_RSSI</b> Amount of change before power levels altered	50	20	50	No

Table 3-3: RFD900x parameters

**Notes:**

- <sup>1</sup> The listed values are the full range of options available on unrestricted modems. The range of settings available may be altered on compliant systems to maintain compliance to the appropriate standards
- <sup>2</sup> ECC - Software Detection and correction, extra packet information, twice the packet length, is sent to allow the recovery of corrupted packets.
- <sup>3</sup> Injects RSSI packet when MAVLink protocol used and heartbeat packet detected.
- <sup>4</sup> 868 modems
- <sup>5</sup> Available from version 3.09
- <sup>6</sup> This setting controls modem functionality linked with 485 interface and DINIO products it is not intended for use outside of this application.

### 3.1 Setting up data encryption

The 128-bit AES data encryption may be set, enabled and disabled using the AT commands (see Table 3.1). The encryption key can be any 32-character hexadecimal string.

To encrypt a device, the encryption mode must first be enabled by typing 'ATS15=1' in the command terminal. Once the encryption mode is active, an encryption key may be set after typing 'AT&E' into the command terminal. The encryption key may be of any 32-character hexadecimal string of the users choosing. Any devices with different encryption settings will not communicate.

After entering command mode, send the following commands to set encryption on using an arbitrary 32 hexadecimal character key. For example:

```
ATS15=1
AT&E=5AEEF103125C0AA233678909160111CA
AT&w
ATZ
```

### 3.2 Setting the air data rate

An air speed of 64kps will give a maximum range of about 40km in open space depending on antenna configurations, terrain and weather. Reducing the air speed can help to increase the range and link quality limits the data throughput.

Considerations for the air speed setting:

- The desired range
- The amount of data across the link
- Whether you send data in one direction or both
- Whether you have enabled ECC or not
- Whether you have adaptive flow control

It is important to note that the air rate should be set to a higher value than the baud rate to prevent bottlenecks and data loss.

Example of changing air data rate:

```
ATS2=224
AT&w
ATZ
```

### 3.3 Setting up SBUS

From firmware version 3.09, users are able to send and receive SBUS transparently via the RFD900x radio link. The user might even opt to receive an R/C stream as PPM and recover it in the remote radio as SBUS if settings are correct. The SBUS stream can then be injected/retrieved from GPIO1 (aka P1.1 or pin 15) the right most pin on the bottom row of the header.

To passthrough the SBUS stream over the radio link, the user must enter command mode and issue the following commands in the local radio, which receives the stream:

```
ATS18=1
AT&w
ATZ
```

To setup the remote radio, which recovers the SBUS stream, the user must first identify the version of SBUS that is compatible with his environment. The RFD900x supports the following SBUS variants:

0. SBUS output disabled
1. SBUS1

2. SBUS2 - 12CH
3. SBUS2 - 18CH
4. SBUS2/1

Once you figured out which version to use in the remote radio, enter command mode and issue the following commands in the terminal where X refers to the SBUS type.

```
ATS19=X  
AT&w  
ATZ
```

### 3.4 Setting up PPM

To enable PPM control signal passthrough on a modem link it is necessary to set the ground station modem to PPM input and the receiver modem to PPM output. You can also mix PPM and SBUS input and output, which allows greater flexibility. The PPM settings are enabled using the S registers 16 or 17. The PPM stream can then be injected/retrieved from GPIO1 (aka P1.1 or pin 15) the right most pin on the bottom row of the header.

In the PPM input side, or local radio type the commands in the terminal after entering command mode:

```
ATS16=1  
AT&w  
ATZ
```

In the remote radio, or PPM output:

```
ATS17=1  
AT&w  
ATZ
```

To record a failsafe PPM stream first connect the PPM generator to the ground station modem. Then power up the receiving modem. Connect the ground station modem using the FTDI cable. After the modems have established a link set the desired PPM failsafe stream using the generator and connect to the ground station modem. Then send the following command to set the failsafe on the receiver modem.

```
RT&R  
RT&w  
RTZ
```



This could alternatively be done by powering up the ground station and sending the PPM while connected to the receive modem via the FTDI cable in which case the command would be.

```
AT&R
```

```
AT&W
```

```
ATZ
```

Please note that it is the modem that receiver modem that must record the failsafe mode.

## 4 Region Certified Modems

---

A modem restricted to regional certified settings will come with locked firmware settings from the factory. The country setting cannot be modified or removed after the modem release. By the same token an unlocked modem cannot be set with country compliance after the modem release. Modems with country settings cannot be regressed to firmware versions prior to SiK peer to peer v3 while unlocked modems can be loaded with other firmware version. Any 900x modems sold before the release of certified modems can be updated with the v3 and later firmware and will operate as an unlocked modem.

The exact settings that are restricted as part of the region locking will vary for each region but may include settings such as MIN/MAX\_FREQ, NUM\_CHANNELS and AIRSPEED. This is done in order to keep the modems operating within certified parameters. It is possible for an unlocked modem to talk to a locked modem by matching the region locked settings as per normal pairing however this does not certify the unlocked modem itself as compliant.

Where there are compliant options such as using a lower or upper band these settings are made available via the RATE/FREQBAND parameter.

## 5 Peer-to-peer Network

The peer-to-peer firmware offers straight forward data communication between two nodes. Figure 4-2 depicts this very simple communication topology. Whenever two nodes have compatible parameters and are within range, communication will be established after the units synchronise. A solid green LED state indicates synchronisation has been successful.

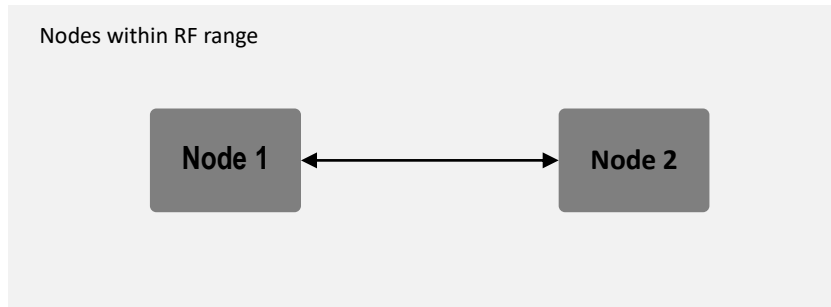


Figure 4-2: Simple pair mode

If operating with other RFD modems on the same band, you will need to set different network ID's to each pair to distinguish the networks from each other. It is also advisable when possible to set the different pairs on different frequencies. This prevents packet collision, communication instability and other interference that may reduce the effectiveness of the links.

Example of using the AT commands to set to network id 5:

```
ATS3=5
AT&W
ATZ
```

## 6 Certifications

---

Compliance	
	AS4268 : 2017 FCC 47CFR 15.247 FCC 47CFR Part 1.1307 FCC 47CFR 1.1310 IC RSS247



## 7 Frequently asked questions (FAQ)

---

### 7.1 How many antennas do I need to use?

One is the minimum. Two is recommended.

### 7.2 How do I connect the FTDI cable to the modem?

The black cable of the FTDI (pin 1) should connect to pin 1 on the modem as shown in Figure 6-2.

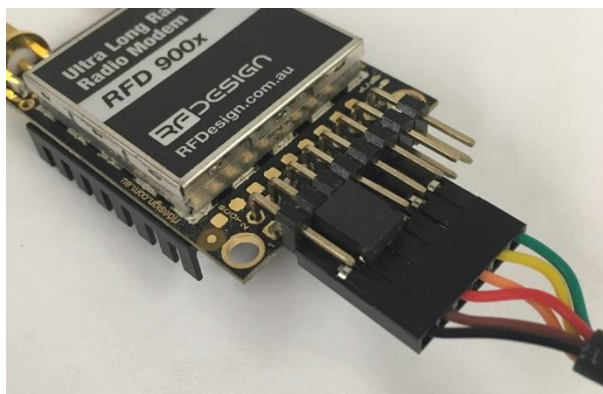


Figure 6-2: An FTDI cable connected to the RFD900x modem

### 7.3 What do I need to upload the firmware or to change the modem configuration?

Download the latest firmware (see “Useful Links”). Download the RFD900x Modem Tools (see “Useful Links”). Connect the FTDI cable to the modem and to a computer. Use the RFD900x Modem Tools to upload the latest firmware or to change the modem configuration (see “RFD900x Modem Tools User Manual”).

## 8 Useful links

---

### **RFD900x Firmware**

<http://rfdesign.com.au/firmware/>

RFD SiK firmware is standard SiK (open source)

RFD Asynchronous firmware

### **RFD900x Modem Tools**

<http://rfdesign.com.au/downloads/>

### **FTDI Cable documentation**

[http://www.ftdichip.com/Support/Documents/DataSheets/Cables/DS\\_TTL-232R\\_CABLES.pdf](http://www.ftdichip.com/Support/Documents/DataSheets/Cables/DS_TTL-232R_CABLES.pdf)

## 9 Document revision history

---

Version	Date	Changes
1.0	19/03/19	Release document